 
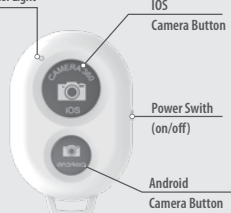 
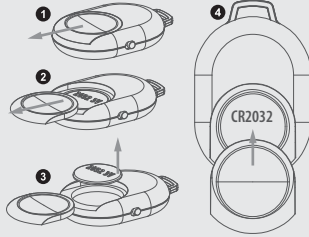 


English  MY STORY BEAUTY & VIDEO CREATION KIT Quick Guide Item No. DP-VRLK10	English INCLUDES: • 10" ring light • Smartphone holder • Light stand • Wireless Bluetooth remote 	English Bluetooth Remote  Pairing the Bluetooth remote 1. When you turn the remote on, it will automatically enter pairing mode. the LED indicator light will begin to flash blue repeatedly. 2. Once in pairing mode, open the settings menu on your smartphone, keep the device and the remote within 3 meters (10 feet) of each other. 3. Enable Bluetooth pairing and wait for your device to locate the shutter remote. 4. When this happens, "GO VIRAL" will appear on the device list, select this option, follow the prompt to pair the remote. 5. The LED indicator light will turn off after a successful connection.	English  Changing the battery on the Bluetooth remote 1. Slide the door open 2. Replace the battery with a coin cell CR2032 3. The battery printing should be facing up 4. Slide the door closed and lock it SPECIFICATIONS Light diameter: 10" (25.4cm) Number of LEDs: 120 Wired control: Temp range 3000-6000K Brightness: 100-1000 LM USB input minimum: 5V/2A (10W) USB input recommended: 5V/3A (15W) Smartphone holder: 360° adjustable Wireless remote: Bluetooth v4.2 Operating frequency: 2.402GHz - 2.480GHz Transmitting power: 0.0008W Wireless range: 10M (33ft) Battery type: CR2032, 3V	English Adjusting the light  Brightness Button (+) Light Color Button Brightness Button (-) Power Button 1. Plug the USB connector into a power source such as a powerbank, computer, or AC wall adapter. 2. Use the inline remote to adjust brightness and the LED mode. 3. The mode button allows you to switch between 3 LED settings: white only (cool white),yellow only (warm light),and white/yellow mixed(daylight). 4. Press the dimmer button(labeled"-") to decrease the brightness of the LED bulbs. 5. Press the increase button(labeled"+") to increase the brightness of the LED bulbs.	English SAFETY INFORMATION: • This product is not a toy and not suited for children under 9 yrs • Don't leave the light unsupervised and never cover the light while on and / or plugged in • Don't use this product in dusty dirty humid or wet environment Questions? Problems? Picked up the wrong item? Before returning to the Store, please give our customer service team a chance to help. email us at TechSupport@Mizco.com  Mizco International, Inc. Cranford, New Jersey, USA All rights reserved. DIGIPOWER is a registered trademark of Mizco International Inc.	English WARRANTY INFORMATION FOR DIGIPOWER PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC. We warrant all DigiPower branded products against defects in material and workmanship for two years from the original date of purchase. At our option, we shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase in order to obtain any warranty service. This warranty is void if the product has been handled or used in any manner which is inconsistent with the instructions accompanying the product or the intended use of the product. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not extend to equipment used with the product. This warranty is valid only if the product is used on a compatible device as specified on or attached to the product package. To verify compatibility, please check the product package for details or visit: www.DigiPowerSolutions.com. Repair or replacement, as provided under this warranty, is your exclusive remedy. We shall not be liable for any incidental or consequential damages. DigiPower hereby expressly disclaims any and all implied warranties of merchantability and fitness for a particular purpose. Some states/countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states/countries do not allow limitations on implied warranties, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and country to country.	English FCC STATEMENT: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/ TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions 1. this device may not cause harmful interference, and 2. this device must accept any interference received, including interference that may cause undesired operation. ICES This Class B digital apparatus complies with Canadian ICES-003.	English  For disposal in countries outside of the European Union This symbol is only valid in the European Union (EU). If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal. This symbol means that the product cannot be disposed of with normal household waste (2012/19/EU). 1. old devices can be returned free of charge to suitable collection points. 2. these are collected there professionally or prepared for reuse. Old appliances may contain harmful substances that can harm the environment and human health. The raw materials contained can contribute to environmental protection through their recycling. 3. the deletion of personal data on the waste equipment to be disposed of must be carried out by the end user on his own responsibility. Hereby, Mizco International, Inc declares that this product is in compliance with Directives 2011/65/EU, 2014/30/EU, and 2014/53 EU. The full text of the EU declaration of conformity is available at the following internet address: www.digipower/compliance	English Notes on battery disposal In connection with the sale of batteries or with the delivery of devices that contain batteries, we are obliged to inform you of the following: Batteries may not be disposed of with household waste. You are legally obliged to return used batteries. Old batteries can contain pollutants which, if not properly stored or disposed of, can harm the environment or your health. But batteries also contain important raw materials such as iron, zinc, and manganese, or nickel and are recycled. You can obtain addresses of suitable collection points from your city or local authority. The symbols shown on the batteries have the following meanings: The symbol of the crossed-out garbage can means that the battery must not be thrown into the household waste. If batteries or accumulators contain mercury, cadmium or lead, you will find the respective chemical symbol (Hg, Cd or Pb) below the symbol of the crossed-out garbage can. Pb = battery contains more than 0.004 mass percent lead Cd = battery contains more than 0.002 percent by mass Cadmium Hg = battery contains more than 0.0005 percent by mass of mercury.
Deutsche  SMARTPHONE RINGLICHT Bedienungsanleitung Product Nr. DP-VRLK10	Deutsche BEINHALTET: • 10" LED-Ringlicht • Smartphone-Halterung • Standfuß • Bluetooth-Fernbedienung 	Deutsche Bluetooth Fernbedienung  Das koppeln der Fernbedienung 1. Drücke den Knopf auf der Fernbedienung – diese geht automatisch in den Kopplungs Modi. Das blaue LED Licht wird blinken. 2. Gehe zu den Einstellungen auf dem Smartphone und wähle Bluetooth. 3. Schalte Bluetooth ein und warte bis das Smartphone die Fernbedienung entdeckt.	Deutsche  Auswechseln der Fernbedienungs Batterie 1. Öffne die Batteriekammer 2. Ersetze die Batterie mit einer Zelle: CR2032 3. Der Aufdruck auf der Batterie soll nach oben zeigen 4. Schliesse die Batteriekammer	Deutsche Lichteinstellung  Helligkeits-Schalter (+) Licht Modi Schalter Helligkeits-Schalter (-) Ein / Aus Schalter 1. Stecke den USB Stecker in einen Strom-Adapter, Powerbank oder Computer mit USB. 2. Benutze den Schalter an dem Kabel um. Lichthelligkeit und Farben Modi zu kontrollieren. 3. Der Farben-Modi Schalter betimmt die drei LED Farb-Modis: Weiss / Kalt; Gelb / Warm; Weiss & Gelb / Tageslicht. 4. Drücke den Helligkeitsschalter (markiert mit „-“) um die Helligkeit zu reduzieren. 5. Drücke den Helligkeitsschalter (markiert mit „+“) um die Helligkeit zu erhöhen.	Deutsche TECHNISCHE DATEN Durchmesser der Leuchte: 25,4 cm Anzahl der LEDs: 120 Bedienfeld am Kabel: Temperaturbereich 3000-6000 K Helligkeit 100-1000 LM USB-Eingang mindestens: 5 V / 2 A (10 W) USB-Eingang empfohlen: 5 V / 3 A (15 W) Smartphone-Halterung: 360° einstellbar Drahtlose Fernbedienung: Bluetooth v4.2 Betriebsfrequenz: 2,402 GHz - 2,480 GHz Sendeleistung: 0,0008W Funkreichweite: 10 m Batterietyp: CR2032, 3V Bei Fragen zum Produkt wenden Sie sich bitte an die Consutec GmbH (info@consutec.com) Consutec GmbH, Kistlerhofstr. 70, 81379 München  Mizco International, Inc. Cranford, New Jersey, USA Alle Rechte vorbehalten. Digipower ist eine registrierte Marke von Mizco International, Inc.	Deutsche  Dieses Symbol bedeutet, dass das Produkt nicht mit dem normalen Hausmüll entsorgt werden kann (2012/19/EU). 1. Altgeräte können kostenlos an geeigneten Rücknahmestellen abgegeben werden. 2. Diese werden dort fachgerecht gesammelt oder zur Wiederverwertung vorbereitet. Altgeräte können Schadstoffe enthalten, die der Umwelt und der menschlichen Gesundheit schaden können. Enthaltene Rohstoffe können durch ihre Wiederverwertung einen Beitrag zum Umweltschutz leisten. 3. Die Löschung personenbezogener Daten auf den zu entsorgenden Altgeräten muss vom Endnutzer eigenverantwortlich vorgenommen werden. 4. Hinweise für Verbraucher in Deutschland: Die in Punkt 1 genannte Rückgabe ist gesetzlich vorgeschrieben. Sammel- und Rücknahmestellen in Deutschland: www.stiftung-ear.de/ Dieses Gerät erzeugt und kann hochfrequenz Energie ausstrahlen und, falls nicht in Übereinstimmung mit den Anweisungen installiert und verwendet, können Störungen des Radios verursacht werden. Es gibt jedoch keine Garantie dafür das in einer bestimmten Installation keine Störungen auftreten können. Wenn Falls dieses Gerät Funkstörungen oder schlechten Fernsehempfang verursacht, kann die Ursache durch	Deutsche das Ein und Ausschalten des Gerätes festgestellt werden und durch folgende Maßnahmen korrigiert werden: - Richten Sie die Empfangsantenne neu aus oder stellen Sie sie neu auf. - Erhöhen Sie die Trennung zwischen Gerät und Empfänger. - Schließen Sie das Gerät an eine Steckdose eines Stromkreises der sich unterscheidet von dem, an den der Empfänger angeschlossen ist. - Wenden Sie sich an den Händler oder einen erfahrenen Radio- / Fernsehtechniker um Hilfe. HINWEISE ZUR BATTERIEENTSORGUNG Im Zusammenhang mit dem Vertrieb von Batterien oder mit der Lieferung von Geräten, die Batterien enthalten, sind wir verpflichtet, Sie auf folgendes hinzuweisen: Batterien dürfen nicht im Hausmüll entsorgt werden. Sie sind zur Rückgabe gebrauchter Batterien gesetzlich verpflichtet. Altbatterien können Schadstoffe enthalten, die bei nicht sachgemäßer Lagerung oder Entsorgung die Umwelt oder Ihre Gesundheit beeinträchtigen können. Batterien enthalten aber auch wichtige Rohstoffe wie z. B. Eisen, Zink und Mangan oder Nickel und werden wiederverwertet. Sie können Altbatterien entweder an uns zurücksenden oder in unmittelbarer Nähe (z.B. im Handel, in kommunalen Sammelstellen oder in unserem Geschäftslokal) unentgeltlich zurückgeben. Die Abgabe in Verkaufsstellen ist dabei auf die für Endnutzer übliche	Deutsche Mengen sowie solche Altbatterien beschränkt, die der Vertreiber als Neubatterien in seinem Sortiment führt oder geführt hat. Adressen geeigneter Sammelstellen können Sie von Ihrer Stadt- oder Kommunalverwaltung erhalten. Die auf den Batterien abgebildeten Symbole haben folgende Bedeutung: Das Symbol der durchgekreuzten Mülltonne bedeutet, dass die Batterie nicht in den Hausmüll gegeben werden darf. Sofern Batterien oder Akkumulatoren Quecksilber, Cadmium oder Blei enthalten, finden Sie das jeweilige chemische Zeichen (Hg, Cd oder Pb) unterhalb des Symbols des durchgestrichenen Müllimers. Pb = Batterie enthält mehr als 0,004 Masseprozent Blei Cd = Batterie enthält mehr als 0,002 Masseprozent Cadmium Hg = Batterie enthält mehr als 0,0005 Masseprozent Quecksilber. Hiermit bestätigt Mizco International, daß das Produkt DP-VRL10RGB den Richtlinien 2011/65/EU, 2014/30/EU, und 2014/53/EU entspricht. Der vollständige Text der Konformitätserklärung ist unter der folgenden Internetadresse zu finden: www.consutec.com/service	

Française

[illegible]

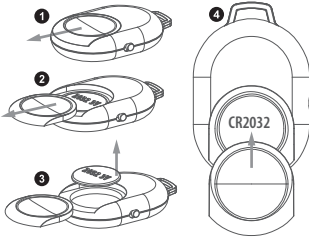