

Phone holder

Stand post with ball joint

Cold shoe adapter

Micro USB cable

60 LED light

Clip for the light

Light holder

Stand base

STAND ASSEMBLY:

- 1**
- 2**
- 3**
- 4**

USING THE CLIP



The diagram illustrates the process of attaching the clip to a laptop. It shows the clip being opened, then attached to the laptop, and finally the light being positioned on the laptop screen.

IDENTIFICATION DIAGRAM

1. Removable vertical mount Smartphone clip
2. Removable horizontal mount Smartphone clip
3. Lens
4. Lens cap
5. Power indicator light
6. Power/mode button
7. Brightness button
8. Brightness button
9. Micro USB charging port
10. USB-C charging port
11. Power indicator light
12. Buckle release for vertical mount
13. Buckle release for vertical mount

CHARGING THE LIGHT

Fully charge the light before first use

Connect the included micro USB cable from the light to a USB charger (not included). You can also charge using a USB-C cable (not included)

When all 4 blue LEDs remain lit the video light is fully charged

Charge time is approximately 2.5 hours using a 1 amp USB charger

To check the battery level, turn the light on and look at the blue LED indicators. One LED < 25%, two LEDs 25% to 50%, three LEDs 50% to 75%, 4 LEDs greater than 75%. A single blinking LED indicates low battery, recharge soon

Note: the power LEDs stay on as long as the Light is turned on

Run time at 100% power is approximately 2 hours, run time at 50% power is 3.75 hours

TURNING THE LIGHT ON

Press and hold the Power/Mode button for 2 seconds to turn the light on, the light will now be in fill mode

Quick press the Power/Mode button to change the color temperature to warm

Quick press the Power/Mode button again to change the color temperature to cool

Pressing the +/- brightness buttons will change the level 10% each time

Press and hold the Power/Mode button for 2 seconds to turn the light off

INSTALLING THE VERTICAL MOUNT SMARTPHONE CLIP

Slide the clip into the bottom of the light until it snaps in place

To remove the clip, press the two buckles inward while sliding the clip out

The clip has an adjustable threaded angles screw to move the light back and forth 90 degrees

Make sure that the hole in the clip provides clearance around the smartphone camera lens

The diagram illustrates the four steps to attach the smartphone camera clip to the back of the phone. Step 1 shows the clip being inserted into the phone's camera lens. Step 2 shows the clip being pushed into the phone's camera lens. Step 3 shows the clip being pushed into the phone's camera lens. Step 4 shows the clip being pushed into the phone's camera lens.

DIGIPOWER®

? Problems? Picked up the wrong item?
Returning to the Store, please give our
service team a chance to help.
TechSupport@Mizco.com
Fast and speedy resolution.

MIZCO INTERNATIONAL, INC.
New Jersey
reserved.
ER is a registered trademark
International Inc.

INFORMATION FOR DIGIPOWER PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC.
all Digipower branded products against defects in material and workmanship for two years
original date of purchase. At our option, we shall repair or replace the defective unit covered by
y. Please retain the dated sales receipt as evidence of the date of purchase in order to obtain y.
service. This warranty is void if the product has been handled or used in any manner which is
not in accordance with the instructions accompanying the product or the intended use of the product. This
warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not
cover equipment used with the product. This warranty is valid only if the product is used on a
device as specified on or attached to the product package. To verify compatibility, please check
the package for details or visit:
[www.DigipowerSolutions.com](#).

placement, as provided under this warranty, is your exclusive remedy. We shall not be liable for
incidental or consequential damages. Digipower hereby expressly disclaims any and all implied
warranties of merchantability and fitness for a particular purpose.
This warranty does not allow the exclusion or limitation of incidental or consequential damages, so
this limitation or exclusion may not apply to you.
This warranty does not allow limitations on implied warranties, so the above limitation may not apply
to you. Your specific legal rights, and you may also have other rights that vary from state
to state or country to country.

This symbol is only valid in the European Union (EU). If you wish to discard this product please
contact your local authorities or dealer and ask for the correct method of disposal.

This symbol means that the product cannot be disposed of with normal household waste (2012/19/EU).

Your appliance can be returned free of charge to suitable collection points.
Appliances are collected there professionally or prepared for reuse. Old appliances may contain harmful
substances that can harm the environment and human health. The raw materials contained can
be recycled through appropriate treatment. Therefore, please ensure that your appliance goes to
an authorized recycling point to ensure environmental protection through their recycling.
No personal data on the waste equipment to be disposed of must be carried out by the
owner on his own responsibility.

UK CA CE Recycle No Flame No Gas

ON BATTERY DISPOSAL

tion with the sale of batteries or with the delivery of devices that contain we are obliged to inform you of the following:

may not be disposed of with household waste. You are legally obliged to d batteries. Old batteries can contain pollutants which, if not properly disposed of, can harm the environment or your health. But batteries also portant raw materials such as iron, zinc, and manganese, or nickel and are ou can obtain addresses of suitable collection points from your city or ority.

ols shown on the batteries have the following meanings:

ol of the crossed-out garbage can means that the battery must not be o the household waste. If batteries or accumulators contain mercury, or lead, you will find the respective chemical symbol (Hg, Cd or Pb) below ol of the crossed-out garbage can.

ry contains more than 0.004 mass percent lead
ry contains more than 0.002 percent by mass
Hg = battery contains more than 0.0005 percent by mass of mercury.

izco International, Inc declares that this product is in compliance with 2011/65/EU, and 2014/30/EU.

xt of the EU declaration of conformity is available at the following internet www.digipower/compliance

QUICK GUIDE

Item No. DP-WSH-PH30

Porte-lampe

Socle



- L'autonomie a 100 %
- l'autonomie à 50 %

Entrée d'alimentation : 5 V

LHV