



INSTRUCTOR VIDEO CALL PRO KIT

PROFI-KIT FÜR VIDEOANRUF
KIT PRO APPEL VIDÉO



QUICK GUIDE

Item No. DP-VLX100

WHAT'S IN THE BOX



112 LED VIDEO LIGHT WITH DIFFUSER (INCLUDES CAMERA MOUNT)
112 LED VIDEO LICHT MIT LICHTFILTER UND BLITZSCHUHADAPTER
LAMPE VIDÉO À 112 LED (AVEC SABOT POUR APPAREIL PHOTO)



TRIPOD PHONE HOLDER
STATIV MIT SMARTPHONE-HALTERUNG
TRÉPIED ET SUPPORT DE TÉLÉPHONE
DE HAUTE QUALITÉ



CLIP-ON MIC*
ANSTECKBARES
MICROFON*
MICRO CRAVATE
À PINCE*



WIRELESS SHUTTER REMOTE
FERNBEDIENUNG
TÉLÉCOMMANDET

*For phones that do not have a 3.5mm audio jack an audio adapter cable is required (sold separately)

*Smartphones ohne einen 3.5mm Kopfhöreranschluss benötigen ein Adapterkabel (nicht beinhaltet)

*For phones that do not have a 3.5mm audio jack an audio adapter cable is required (sold separately)

English

USING THE TRIPOD




Open phone holder



Extend top clip



Insert phone and release top clip

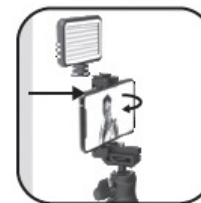

Attach light and tighten down



Extend each leg for height adjustment

USING THE MICROPHONE

Note: for Android phones that do not have a 3.5mm audio jacks you will need a USB-C to 3.5mm adapter. For iPhone 7 and newer you will need a Lightning to 3.5mm adapter. These adapters are sold separately. Go to www.digipower.com/audioadapters for more information.

Note: For DSLR or Mirrorless cameras attach the TRS 3.5mm adapter to the end of the microphone cable before connecting to your camera.

English




1. Display screen
2. Power/Mode button
3. +/- adjustment buttons
4. Micro USB charge port
5. 1/4" thread mount

CHARGING THE LIGHT

- Fully charge the light before first use
- Connect the included micro USB cable from the light to a USB charger (not included)
- The display screen will show a plug to indicate charging
- When the display screen indicates 100% the light is fully charged
- Charge time is approximately 2 hours using a 1 amp USB charger


USING THE LIGHT

- Press and hold the Power/Mode button for 2 seconds to turn the light on, it will now be in fill mode
- Quick press the Power/Mode button to change modes from color temperature adjustment to brightness level
 - Using the +/- buttons adjust the color temperature from 3100K (warm white) to 5500K (daylight) in 100K increments
 - Using the +/- buttons adjust the brightness level from 1% to 100% in 1% increments

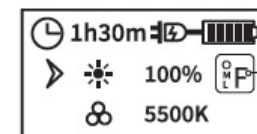

- Press and hold the Power/Mode button for 2 seconds to turn the light off
- When the light is restarted, it will remember the last settings used

English

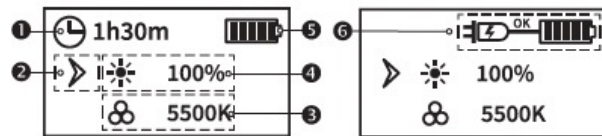

1. Remaining use time for battery
2. Mode indicator, use the power/mode button to switch between modes
3. Color temperature mode
4. Brightness level
5. Battery level
6. Charging indicator
7. High temperature warning light (if the light gets too hot it will auto power off, wait for it to cool down then turn it back on)


ATTACHING THE LIGHT TO A CAMERA SHOE

- Thread the camera shoe adapter onto the bottom of the light
- Slide the shoe adapter into the shoe of a DSLR or Mirrorless camera, turn the thumbwheel clockwise to secure it



USING THE DIFFUSER FILTER

- This kit features a white diffuser to soften the light on subjects
- Clip the diffuser over the front of the light

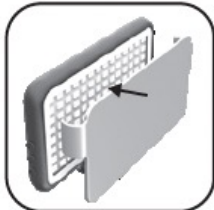

PRODUCT SPECIFICATIONS

Color temperature	3100 - 5500K
Luminous flux	750lm
Color rendering index	>= 96
Brightness adjustment range	0-100%
Maximum power consumption	5W
Input	Micro USB 5V/1A

English

BLUETOOTH REMOTE

LED Indicator Light

IOS
Camera Button

Power Switch
(on/off)

Android
Camera Button



SPECIFICATIONS:

Bluetooth Technology: V4.2
Operating frequency:
2.402GHz-2.480 GHz


Transmitting power: 0.0008W
Wireless range: 10M (33ft)
Battery type: CR2032, 3V

PAIRING THE BLUETOOTH REMOTE

1. When you turn the remote on, it will automatically enter pairing mode, the LED indicator light will begin to flash blue repeatedly.
2. Once in pairing mode, open the settings menu on your smartphone, keep the device and the remote within 3 meters (10 feet) of each other.
3. Enable Bluetooth pairing and wait for your device to locate the shutter remote.

English

4. When this happens, "GO VIRAL" will appear on the device list, select this option, follow the prompt to pair the remote.
5. The LED indicator light will turn off after a successful connection.

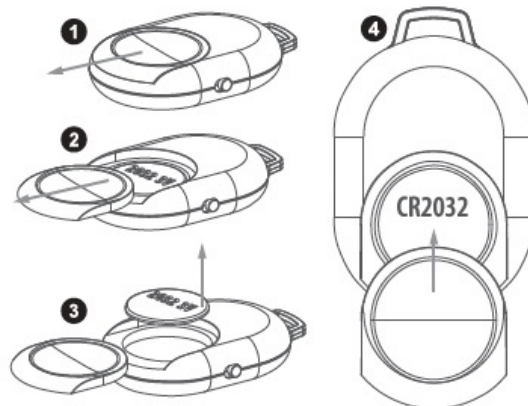

CHANGING THE BATTERY ON THE BLUETOOTH REMOTE

1. Slide the door open
2. Replace the battery with a coin cell CR2032 type
3. The battery printing should be facing up
4. Slide the door closed and lock it

SAFETY INFORMATION

- This product is not a toy and not suited for children under 9 yrs
- Don't leave the light unsupervised and never cover the light while on and / or plugged in
- Don't use this product in dusty dirty humid or wet environment

English

Questions? Problems? Picked up the wrong item? Before returning to the Store, please give our customer service team a chance to help. Email us at TechSupport@Mizco.com for a seamless and speedy resolution.

Mizco International, Inc.
Cranford, New Jersey 07016
All rights reserved.
DIGIPOWER is a registered trademark of Mizco International Inc.

WARRANTY INFORMATION FOR DIGIPOWER PRODUCTS, A DIVISION OF MIZCO INTERNATIONAL, INC.

We warrant all Digipower branded products against defects in material and workmanship for two years from the original date of purchase. At our option, we shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase in order to obtain any warranty service. This warranty is void if the product has been handled or used in any manner which is inconsistent with the instructions accompanying the product or the intended use of the product. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty does not extend to equipment used with the product. This warranty is valid only if the product is used on a compatible device as specified on or attached to the product package. To verify compatibility, please check the product package for details or visit: www.DigipowerSolutions.com.

Repair or replacement, as provided under this warranty, is our exclusive remedy. We shall not be liable for any incidental or consequential damages. Digipower hereby expressly disclaims any and all implied warranties of merchantability and fitness for a particular purpose.

Some states/countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states/countries do not allow limitations on implied warranties, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and country to country.

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

ICES

This Class B digital apparatus complies with Canadian ICES-003.



Remote control FCC ID: RZOGVIRAL

English

NOTES ON BATTERY DISPOSAL

In connection with the sale of batteries or with the delivery of devices that contain batteries, we are obliged to inform you of the following:

Batteries may not be disposed of with household waste. You are legally obliged to return used batteries. Old batteries can contain pollutants which, if not properly stored or disposed of, can harm the environment or your health. But batteries also contain important raw materials such as iron, zinc, and manganese, or nickel and are recycled. You can obtain addresses of suitable collection points from your city or local authority.

The symbols shown on the batteries have the following meanings:

The symbol of the crossed-out garbage can means that the battery must not be thrown into the household waste. If batteries or accumulators contain mercury, cadmium or lead, you will find the respective chemical symbol (Hg, Cd or Pb) below the symbol of the crossed-out garbage can.

Pb = battery contains more than 0.004 mass percent lead
Cd = battery contains more than 0.002 percent by mass
Cadmium Hg = battery contains more than 0.0005 percent by mass of mercury.

Hereby, Mizco International, Inc declares that this product is in compliance with Directives 2011/65/EU, 2014/30/EU, and 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
www.digipower.compliance

Deutsche

STATIV VERWENDEN



Smartphone-Halterung öffnen



Obere Klemme herausziehen



Telefon einsetzen und obere Klemme loslassen



Leuchte anbringen und festschrauben

MIKROFON VERWENDEN



Hinweis: Für Android-Smartphones ohne 3,5-mm-Audiobuchse wird ein USB-C/3,5-mm-Adapter benötigt. Für iPhone 7 und neuere Modelle wird ein Lightning/3,5 mm-Adapter benötigt. Diese Adapter sind separat erhältlich.
Weitere Informationen finden Sie unter www.digipower.com/audioadapters.

Hinweis: Bei DSLR-Kameras oder spiegellosen Kameras befestigen Sie den 3,5-mm-TRS-Adapter am Mikrofonkabel. Schließen Sie dann das Kabel an Ihre Kamera an.

Deutsche




- 1. LED Anzeige Fenster
- 2. Ein/Aus & Modus Schalter
- 3. +/- Einstellungen
- 4. Micro USB Ladeanschluss
- 5. 1/4 Zoll Gewinde

LICHT AUFLADEN


- Bevor der ersten Nutzung sollte das Licht vollständig aufgeladen werden
- Verbinden Sie das USB Kabel mit dem Licht und einem USB Ladegerät (nicht beinhaltet)
- Das LED Anzeigefenster zeigt ein Ladegreiß symbol
- Wenn das LED Anzeigefenster 100 % zeigt ist das Licht vollständig aufgeladen
- Die Aufladezeit beträgt ungefähr 2 Stunden

DAS LICHT BENUTZEN

- Drücken Sie den Einschalt Knopf für 2 Sekunden und das Licht ist jetzt im normalen Modus
- Drücken Sie den Einschalt / Modus Schalter kurz um den Modus von Helligkeit zu Farbtemperatur zu wechseln
 - Benutzen Sie die +/-Einstellungsschalter um die Farbtemperatur von 3100K bis zu 5500K (Tageslicht) einzustellen
 - Benutzen Sie die +/-Einstellungsschalter um die Helligkeit von 1% bis zu 100% einzustellen
- Drücken Sie den Einschalt Knopf für 2 Sekunden um das Licht auszuschalten
- Wenn das Licht wieder angestellt wird geht es automatisch in den zuletzt genutzten Modus

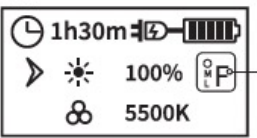

Deutsche

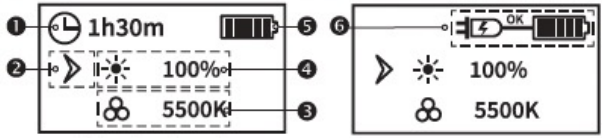

1. Verbleibende Ladung in der Batterie
2. Modus Indikator, benutze den Einschalt/Modus Schalter um zwischen den Modi zu wechseln
3. Farbtemperatur Modus
4. Helligkeitsstufen
5. Batterie Ladezustand
6. Ladungs Indikator
7. Temperatur Warnungs Anzeige (wenn das Licht zu heiß wird schaltet es sich automatisch aus, sobald es abgekühlt ist kann es wieder eingeschaltet werden)

BENUTZUNG DES LICHTES MIT EINER KAMERA

- Schrauben sie den Blitzschuhadapter in das LED Licht
- Schieben sie den Blitzschuhadapter in den Blitzadapter auf der Kamera



BENUTZUNG DES FARBFILTERS

- Ein weißer Farbfiler (mitgeliefert) generiert ein weiches Licht
- Sie können den Farbfiler an das Licht klemmen



PRODUKT SPEZIFIKATIONEN

Farbtemperatur.	3100 - 5500K
Leuchtende UX.	750 lm
CRI	> = 96
Helligkeitsstufen	0 bis 100%
Maximaler Stromkonsum.	5W
Eingabe	Micro USB 5V - 1 A

BLUETOOTH FERNBEDIENUNG

LED Indikator Licht

IOS

Kamera Auslöser

Ein / Aus
Schaltung

Android

Kamera Auslöser



TECHNISCHE DATEN DER FERNBEDIENUNG

Drahtlose Fernbedienung: Bluetooth v4.2

Betriebsfrequenz: 2,402 GHz - 2,480 GHz

Sendeleistung: 0.0008W


Funkreichweite: 10 m

Batterietyp: CR2032, 3 V

DAS KOPPELN DER FERNBEDIENUNG

1. Drücke den Knopf auf der Fernbedienung – diese geht automatisch in den Kopplungs Modi. Das blaue LED Licht wird blinken.
2. Gehe zu den Einstellungen auf dem Smartphone und wähle Bluetooth.
3. Schalte Bluetooth ein und warte bis das Smartphone die Fernbedienung entdeckt.

4. Die Fernbedienung wird als „GO VIRAL“ in der Geräte Liste erscheinen. Wähle dies aus und akzeptiere die Kopplung.
5. Das LED Licht auf der Fernbedienung wird aufhören zu blinken.

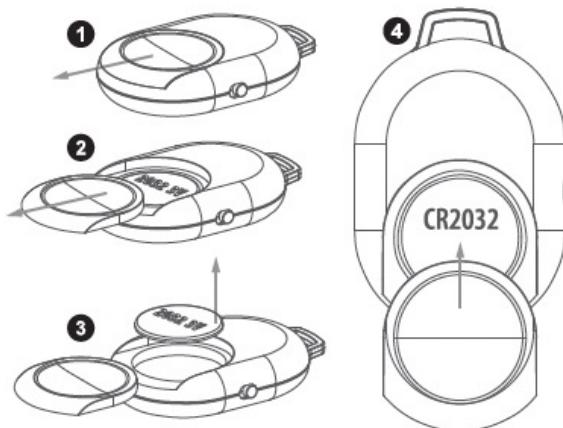

AUSWECHSELN DER FERNBEDIENUNGS BATTERIE

1. Öffne die Batteriekammer
2. Ersetze die Batterie mit einer Zelle: CR2032
3. Der Aufdruck auf der Batterie soll nach oben zeigen
4. Schliesse die Batteriekammer

SICHERHEITSHINWEIS

- Dieses Produkt ist kein Spielzeug und nicht für Kinder unter 9 Jahren geeignet
- Lassen Sie die Leuchte nicht unbeaufsichtigt und decken Sie die Leuchte nicht ab, wenn sie eingeschaltet und / oder eingesteckt ist
- Produkt nicht in staubiger, schmutziger, feuchter oder Nasser Umgebung verwenden!

Bei Fragen zum Produkt wenden Sie sich bitte an die Consutec GmbH (info@consutec.com) Consutec GmbH, Kistlerhofstr. 70, 81379 München

Dieses Symbol bedeutet, dass das Produkt nicht mit dem normalen Hausmüll entsorgt werden kann (2012/19/EU).

1. Altgeräte können kostenlos an geeigneten Rücknahmestellen abgegeben werden.
2. Diese werden dort fachgerecht gesammelt oder zur Wiederverwendung vorbereitet. Altgeräte können Schadstoffe enthalten, die der Umwelt und der menschlichen Gesundheit schaden können. Enthaltene Rohstoffe können durch ihre Wiederverwertung einen Beitrag zum Umweltschutz leisten.
3. Die Löschung personenbezogener Daten auf den zu entsorgenden Altgeräten muss vom Endnutzer eigenverantwortlich vorgenommen werden.
4. Hinweise für Verbraucher in Deutschland: Die in Punkt 1 genannte Rückgabe ist gesetzlich vorgeschrieben. Sammel- und Rücknahmestellen in Deutschland: www.stiftung-ear.de

Hinweise zur Batterieentsorgung

Im Zusammenhang mit dem Vertrieb von Batterien oder mit der Lieferung von Geräten, die Batterien enthalten, sind wir verpflichtet, Sie auf folgendes hinzuweisen:

Batterien dürfen nicht im Hausmüll entsorgt werden. Sie sind zur Rückgabe gebrauchter Batterien gesetzlich verpflichtet. Altbatterien können Schadstoffe enthalten, die bei nicht sachgemäßer Lagerung oder Entsorgung die Umwelt oder Ihre Gesundheit beeinträchtigen können. Batterien enthalten aber auch wichtige Rohstoffe wie z. B. Eisen, Zink und Mangan oder Nickel und werden wiederverwertet. Sie können Altbatterien entweder an uns zurücksenden oder in unmittelbarer Nähe (z.B. im Handel, in kommunalen Sammelstellen oder in unserem Geschäftslokal) unentgeltlich zurückgeben. Die Abgabe in Verkaufsstellen ist dabei auf die für Endnutzer übliche Mengen sowie solche Altbatterien beschränkt, die der Vertreiber als Neubatterien in seinem Sortiment führt oder geführt hat. Adressen geeigneter Sammelstellen können Sie von Ihrer Stadt- oder Kommunalverwaltung erhalten.

Die auf den Batterien abgebildeten Symbole haben folgende Bedeutung:

Das Symbol der durchgekreuzten Mülltonne bedeutet, dass die Batterie nicht in den Hausmüll gegeben werden darf. Sofern Batterien oder Akkumulatoren Quecksilber, Cadmium oder Blei enthalten, finden Sie das jeweilige chemische Zeichen (Hg, Cd oder Pb) unterhalb des Symbols des durchgestrichenen Müllimers.



Pb = Batterie enthält mehr als 0,004 Masseprozent Blei
Cd = Batterie enthält mehr als 0,002 Masseprozent Cadmium
Hg = Batterie enthält mehr als 0,0005 Masseprozent Quecksilber.

Hiermit bestätigt Mizco International, daß das Produkt den Richtlinien 2011/65/EU, 2014/30/EU, und 2014/53/EU entspricht.
Der vollständige Text der Konformitätserklärung ist unter der folgenden Internetadresse zu finden: www.consutec.com/service

Dieses Gerät erzeugt und kann hochfrequenz Energie ausstrahlen und, falls nicht in Übereinstimmung mit den Anweisungen installiert und verwendet, können Störungen des Radios verursacht werden. Es gibt jedoch keine Garantie dafür das in einer bestimmten Installation keine Störungen auftreten können. Wenn Falls dieses Gerät Funkstörungen oder schlechten Fernsehempfang verursacht, kann die Ursache durch das Ein und Ausschalten des Gerätes festgestellt werden und durch folgende Maßnahmen korrigiert werden:

- Richten Sie die Empfangsantenne neu aus oder stellen Sie sie neu auf.
- Erhöhen Sie die Trennung zwischen Gerät und Empfänger.
- Schließen Sie das Gerät an eine Steckdose eines Stromkreises der sich unterscheidet von dem, an den der Empfänger angeschlossen ist.
- Wenden Sie sich an den Händler oder einen erfahrenen Radio- / Fernsehtechniker um Hilfe.